



Installation Guide

Go Ahead Deck Me Inc. Window Corner Flashings are part of the Go Ahead Deck Me window flashing system and are designed to make flashing window corner openings faster, easier and better than with tar paper or adhesive flashing alone and will not rip during window installation.

The three dimensional shape of the Go Ahead Deck Window Corner Flashing is formed to fit the corners of the window openings and eliminate the hole that two dimensional flashings such as tar paper or tape leave at the intersection of the window opening and the sheathing. The Window Corner Flashings are much thinner than built up layers of adhesive flashing allowing for a better window fit. Go Ahead Deck Me Window Corner Flashings are made with 100% virgin High Density Poly Ethylene (HDPE) to insure consistent top quality.

GO AHEAD FLASH ME 



**Complete
framing
the rough
opening of
the window.**

www.goaheadflashme.com
info@goaheadflashme.com
604-681-0777

2


GO AHEAD FLASH ME




Install the sheathing membrane such as tar paper or house wrap to the front of the window rough opening.

www.goaheadflashme.com
info@goaheadflashme.com
604-681-0777

3
GO AHEAD FLASH ME

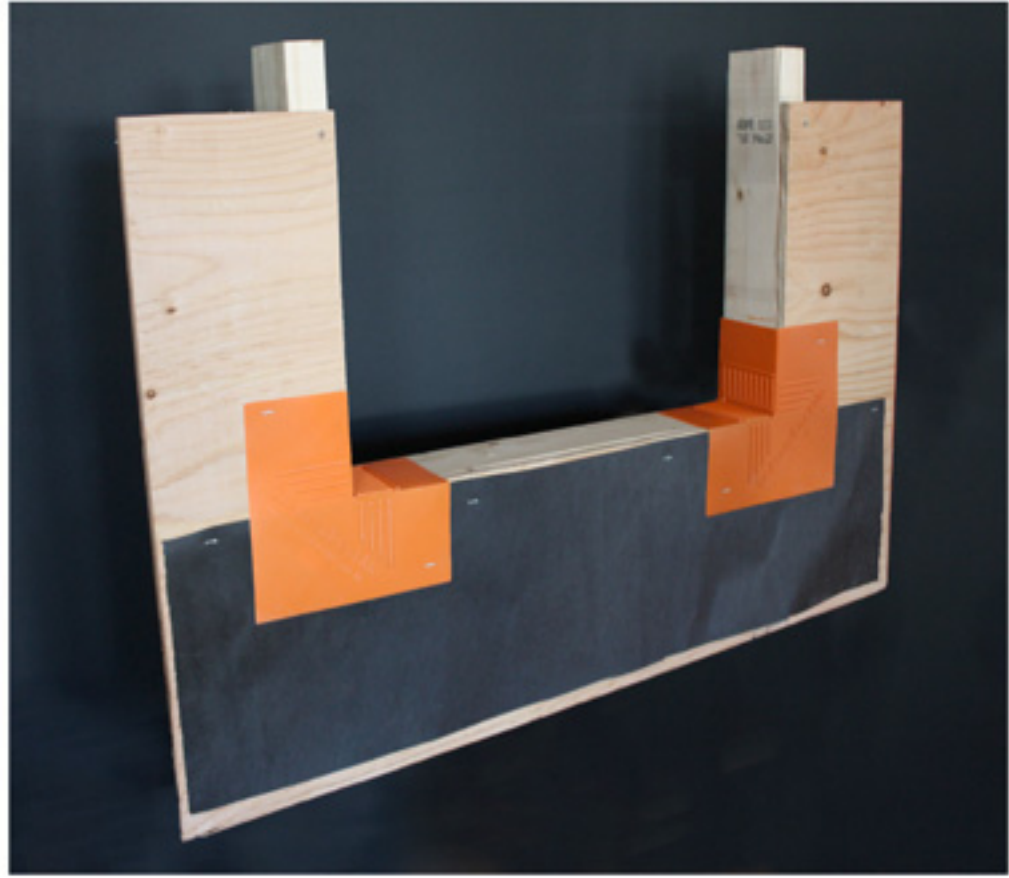

**Locate
window corner
flashings at
the bottom
corners of the
window rough
opening.**

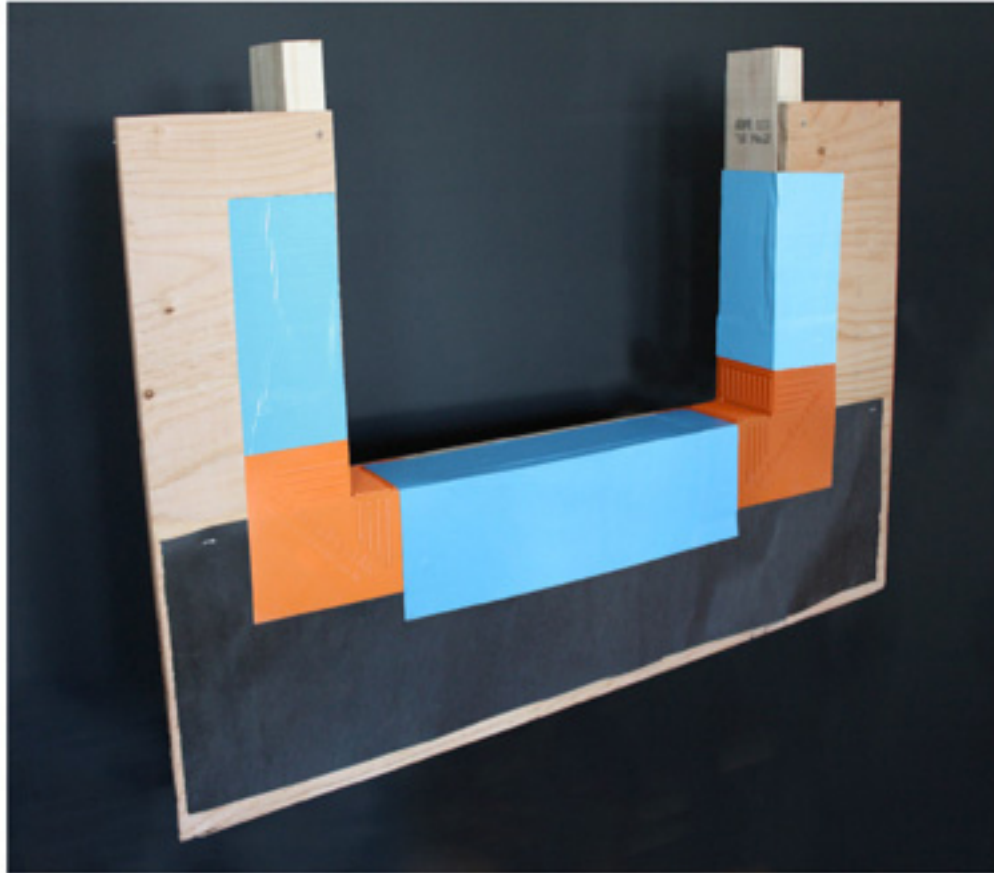4**GO AHEAD FLASH ME**

Using the adhesive flashing tape secure the corner flashings by applying the tape to the side window opening overlapping the window corner flashing. Then apply the adhesive flashing tape to the bottom of the window opening again overlapping the window corner flashings. The adhesive tape can go up to but not over the drainage ribs on both sides and bottom.